



WE - Deluxe Hooktyer

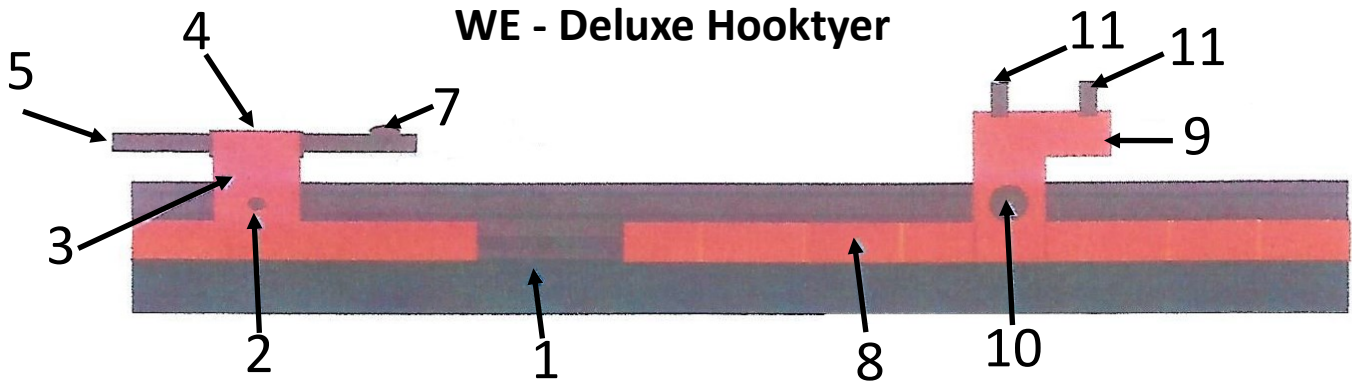

- | | |
|----------------------|-------------------|
| 1: Base | 7: Thumbscrew |
| 2: Start Switch | 8: Length Guide |
| 3: Hooktyer Holder | 9: Peg Slider |
| 4: Rubber O'Seals | 10: Locking Wheel |
| 5: Matchmen Hooktyer | 11: Pegs |
| 6: Metal Pins | |

How To:-

- 1: Insert your chosen hook into the matchman holder (5) You can remove the hooktyer holder (3) to make it easier to insert your hook by sliding it off
 - 2: Slide the hooktyer holder (3) to the right until it stops
 - 3: Set the peg slider (9) to the desired length required to make your rig. Unscrew the locking wheel (10) and then tighten again
 - 4: Select your fishing line and make a loop and fasten the loop to peg number 1 (11)
 - 5: Push the flat side of the metal on the hooktyer (5) until it's against the thumbscrew (7)
 - 6: Turn the hooktyer (5) showing the metal pins (6) sticking up, wet the hook and line
 - 7: Pass the line around the back clip then forward pass the front clip and hold at the approximate angle
 - 8: Rotate the hooktyer by pressing the switch (5) Make between 5-8 turns, this whips the spool line against the hook shank, apply tension as whippings are formed
 - 9: Ensure the line is travelling along the hook shank parallel
 - 10: Keep the tension on pass the line around and underneath the first metal pin (6) and press it down
 - 11: Slide the hooktyer holder (3) to the left to secure the line to the hook, this giving it the correct tension
 - 12: Release the thumbscrew (7) on the hooktyer (5)
 - 13: Remove the hook and cut excess line - All done!
- Should you wish to remove the Matchman Hooktyer and change it to our own Hooktyer, simply remove the rubber O'Seals (4) and replace
 - AAA Batteries included and can be easily replaced
 - If you want to make your rigs longer i.e 12" then set the peg slider (9) to 10". Loop your line to peg number 1, wrap the line around peg 2 and pass the line towards the hooktyer - every wrap is 2" as the distance between the pegs is 1"